


Fraises à angler
Chamfering drills
Fasenfräser

1390

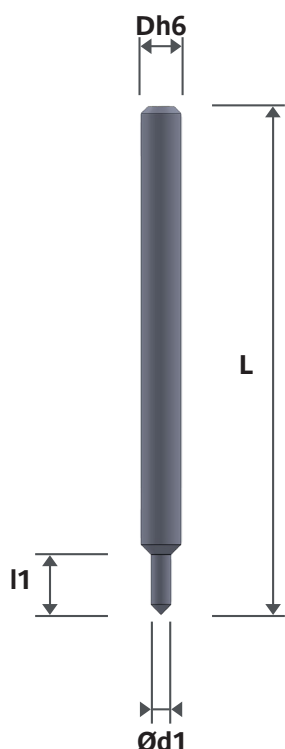

| Ød1 | l1 | Z | Dh6 | L |
|------|------|---|-----|----|
| 0.50 | 3.00 | 1 | 3 | 39 |
| 0.60 | 3.00 | 1 | 3 | 39 |
| 0.70 | 3.00 | 1 | 3 | 39 |
| 0.80 | 3.00 | 1 | 3 | 39 |
| 0.90 | 3.00 | 1 | 3 | 39 |
| 1.00 | 3.00 | 1 | 3 | 39 |
| 1.10 | 3.00 | 1 | 3 | 39 |
| 1.20 | 3.00 | 1 | 3 | 39 |
| 1.30 | 3.00 | 1 | 3 | 39 |
| 1.40 | 3.00 | 1 | 3 | 39 |
| 1.50 | 4.50 | 1 | 3 | 39 |
| 2.00 | 6.00 | 1 | 3 | 39 |
| 2.50 | 7.00 | 1 | 3 | 39 |
| 3.00 | - | 1 | 3 | 39 |


1 dent renforcée à 90°
1 reinforced tooth – 90°
1 Zahn verstärkt 90°



| | | |
|------|---------|----|
| MG10 | 0° λ | |
| | N | MD |

Fraises à angler
Chamfering drills
Fasenfräser

13120

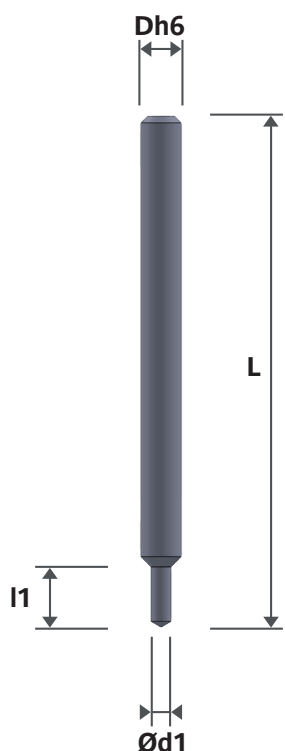

| Ød1 | l1 | Z | Dh6 | L |
|------|------|---|-----|----|
| 0.50 | 3.00 | 1 | 3 | 39 |
| 0.60 | 3.00 | 1 | 3 | 39 |
| 0.70 | 3.00 | 1 | 3 | 39 |
| 0.80 | 3.00 | 1 | 3 | 39 |
| 0.90 | 3.00 | 1 | 3 | 39 |
| 1.00 | 3.00 | 1 | 3 | 39 |
| 1.10 | 3.00 | 1 | 3 | 39 |
| 1.20 | 3.00 | 1 | 3 | 39 |
| 1.30 | 3.00 | 1 | 3 | 39 |
| 1.40 | 3.00 | 1 | 3 | 39 |
| 1.50 | 5.00 | 1 | 3 | 39 |
| 2.00 | 6.00 | 1 | 3 | 39 |
| 2.50 | 7.00 | 1 | 3 | 39 |
| 3.00 | - | 1 | 3 | 39 |

1 dent renforcée à 120°
1 reinforced tooth – 120°
1 Zahn verstärkt 120°



| | | |
|------|---------|----|
| MG10 | 0° λ | |
| | N | MD |